

IMPORTANT SAFETY INFORMATION

ATTENTION INSTALLER:
THIS SAFETY INFORMATION MUST BE DELIVERED TO THE END USER

MAINTENANCE

- Test the WOCD at least once per month to verify proper engagement and restriction of the window opening. Also verify proper disengagement and re-engagement of the WOCD. See **DISENGAGE THE WOCD** and **RE-ENGAGE THE WOCD**.
- Visually inspect each device for any deformities, fraying wire or damage.
- If any dust or debris build up has occurred, remove by gently applying clean dry compressed air. **DO NOT EXPOSE THE WOCD TO ANY TYPE OF CLEANING LIQUIDS, DETERGENTS OR ACIDIC SOLUTIONS.**
- If the WOCD shows any sign of damage or does not operate as described, close and lock the window. Do not open the window and advise other users not to open the window until the WOCD is repaired or replaced. Contact the window manufacturer for inspection and repair or replacement.

IMPORTANT SAFETY INFORMATION

ATTENTION INSTALLER:
THIS SAFETY INFORMATION MUST BE DELIVERED TO THE END USER



WARNING

**NO WINDOW RESCUE ABOVE 75FT
(6TH FLOOR)**

- Fire rescue ladder may not reach beyond 75ft (6th Floor).
- Do not rely on being rescued from windows above 75ft (6th Floor). Follow building fire escape plan.



WARNING

POSSIBLE FALL HAZARD

- Young children may fall out of the window if the opening control device (WOCD) is not installed correctly.
- Install the device so that a rigid 4.0-in. (102 mm) diameter sphere does not pass through any space at the lowest opening portion in the window opening after the window opening control device (WOCD) is in place.
- Young children may fall out the window if all installation instructions are not followed:
- Use recommended materials and techniques.
- Make sure that the window opening control device (WOCD) is securely installed in accordance with manufacturer's instructions.
- Make sure that the window frame is in good condition.



WARNING

**BLOCKS ESCAPE IN FIRE AND
EMERGENCY UNLESS RELEASED**

- Need to properly operate release mechanism to open the window opening control device (WOCD) by: **press and hold the red button of the Frame Assembly then press down on the red portion of the Sash Connector to release the Sash Connector from the Frame Assembly.** Refer to **DISENGAGE THE WOCD** for additional information.
- Never apply padlocks or devices that require a key or tool to unlock them to the release mechanism of the WOCD.



WARNING

POSSIBLE FALL HAZARD

- This window opening control device (WOCD) is designed to protect against accidental operation of windows by children five years and younger.
- This window opening control device (WOCD) is not a substitute for attentive supervision of all young children.
- Keep window opening control device (WOCD) properly engaged unless needed for use in an emergency.

IMPORTANT SAFETY INFORMATION

ATTENTION INSTALLER:
THIS SAFETY INFORMATION MUST BE DELIVERED TO THE END USER

IMPORTANT SAFETY INFORMATION

- When the window opening control device (WOCD) is properly installed and engaged, no space shall exist at the lowest opening portion of the window opening that would permit the passage of a rigid sphere 4.0" (102mm) in diameter.
- The WOCD must be checked to verify re-engagement after each disengagement. Refer to **RE-ENGAGE THE WOCD** for instructions.
- The WOCD shall be installed by the window manufacturer or the window manufacturer's approved installer.
- User shall review all operating instructions for proper disengagement and re-engagement procedures. End users are responsible for understanding proper operation.
- The WOCD shall be maintained and tested monthly (once a month) to ensure proper operation. After testing, window must be securely closed.
- It is required that all occupants six (6) years of age or older be trained to operate the release mechanism in case of an emergency.
- Close and lock windows during high winds to prevent damage to windows and hardware.
- The WOCD is designed for use on residential casement windows.
- Design limitations:
 - Maximum window frame width: 36" (914 mm)
 - Maximum window frame height: 72" (1,829 mm)

The information in this document affects you, your children's safety and your legal rights and responsibilities. Failure to follow instructions and warnings in this document may result in serious injury or death. This document and all other collateral information are subject to change at the sole discretion of Interlock.

Interlock accepts no liability for damage, injury or legal responsibility incurred under any use of this product regardless of, under theory of law including tort, contract or strict liability. For additional information, visit our website at: www.interlockna.com

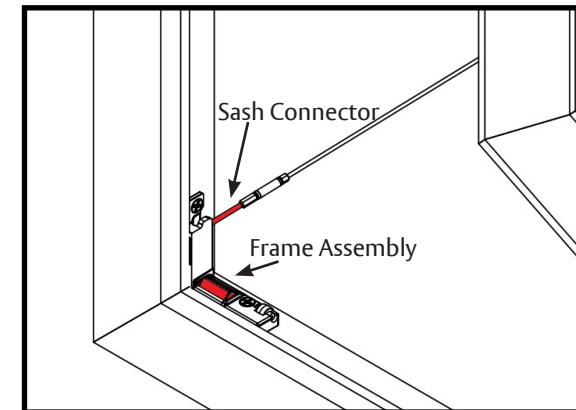
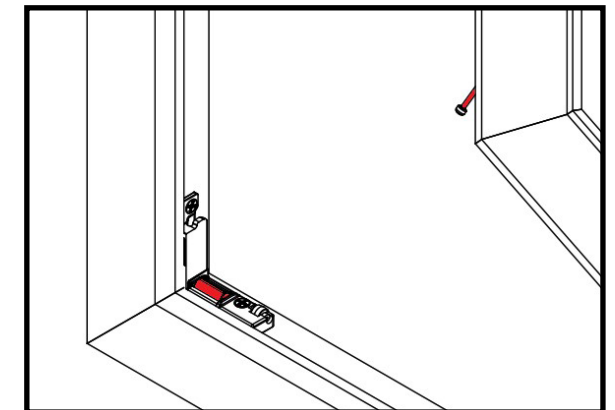
The Interlock WOCD is 3rd party tested and complies with ASTM F2090-21

IMPORTANT SAFETY INFORMATION

ATTENTION INSTALLER:
THIS SAFETY INFORMATION MUST BE DELIVERED TO THE END USER

DISENGAGE THE WOCD

1. Unlock and open the window until the Frame Assembly and Sash Connector are accessible.
2. Press and hold the red button of the Frame Assembly then press down on the red portion of the Sash Connector to release the Sash Connector from the Frame Assembly. Figure 1
3. The Sash Connector will retract into the Sash Assembly. The window can now be opened fully. Figure 2

FIGURE 1**FIGURE 2****WHEN TO DISENGAGE THE WOCD**

Disengage the WOCD for emergency egress through the window, cleaning and maintenance of the window or monthly testing and maintenance of the WOCD. Refer to **MAINTENANCE** instructions.

RE-ENGAGE THE WOCD

1. Close and lock the window. The WOCD will automatically re-engage.
2. Unlock and open the window to verify automatic re-engagement. Continue opening to verify the WOCD has successfully re-engaged and restricts the window opening.
3. Close and lock the window.