

MAGNUM® Hinges


Installation Instructions for MIS & SG MAGNUM® Hinges

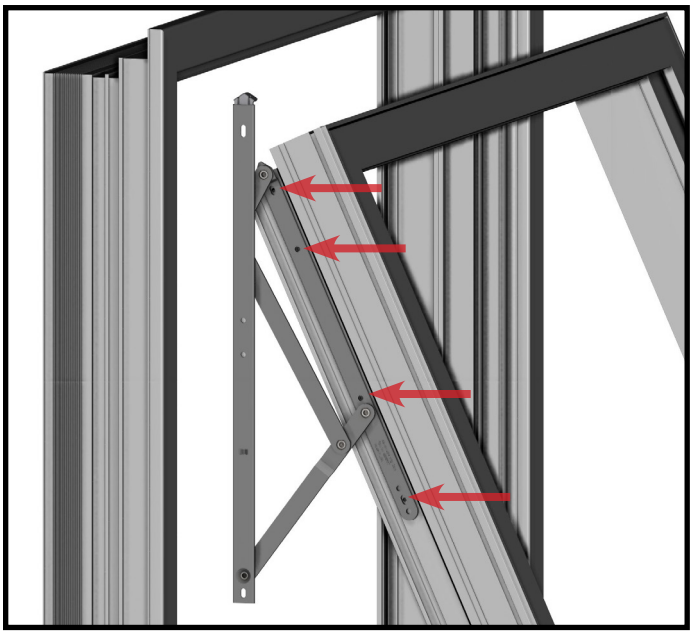


Step 1:
Mount the MAGNUM® Hinge to the Vent by attaching #10 or M5 stainless steel pan head screws in shown holes. For limited access applications, tighten all vent screws.

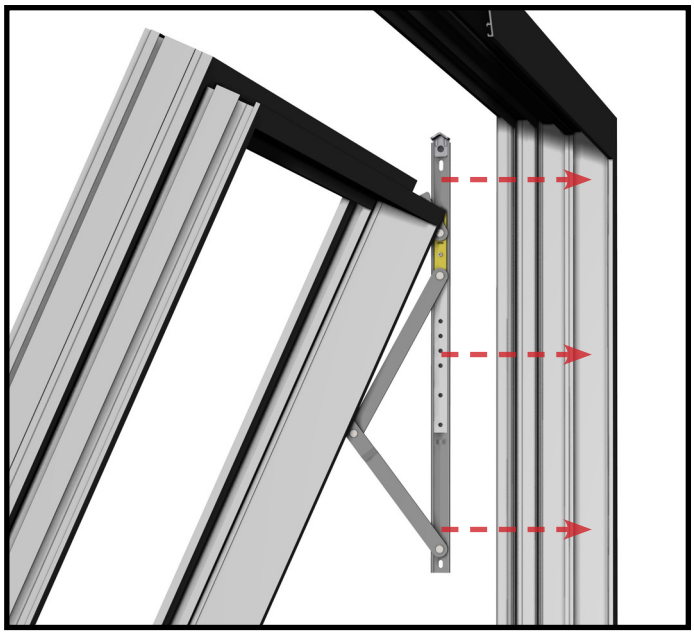

Step 2:
Align the Vent with the mounted MAGNUM® Hinge into the Frame.

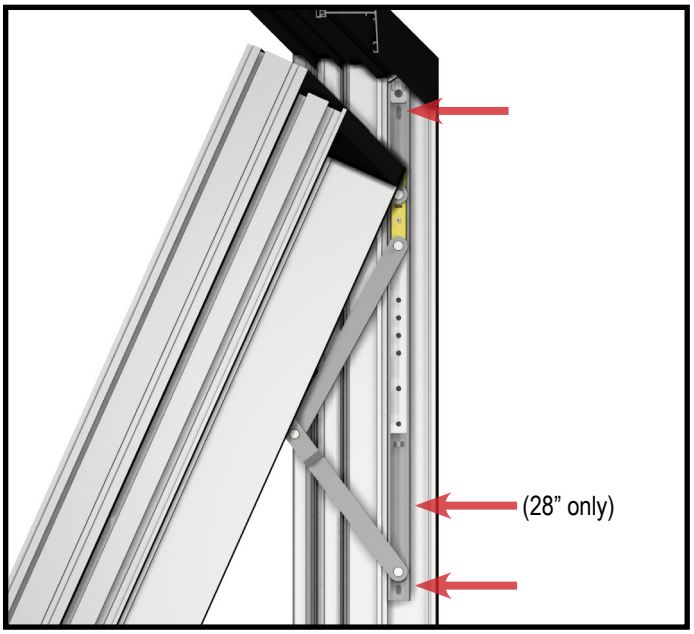

Step 3:
Mount the MAGNUM® Hinge to the Frame by attaching #10 or M5 stainless steel pan head screws in the slotted holes. Ensure the cap(tip) of the MAGNUM® Hinge is in contact with the horizontal window profile.
1211 Hinge Adjuster may be used, if installed.

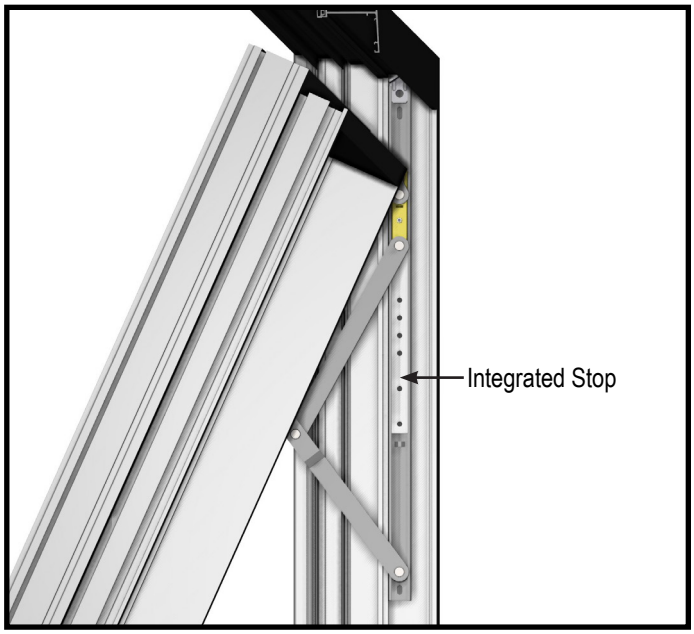

Step 4:
Close the window to confirm sash/vent reveal. Tighten all screws in slotted holes.
Slide the Integrated Stop to allow for the desired window opening. Attach #10 or M5 stainless steel pan head screws in the holes revealed by the Integrated Stop (1 minimum, 2 if possible).

Caldwell Manufacturing Company North America, LLC
Phone: (888) 347-7771
Fax: (585) 352-3729
Web: www.caldwellmfgco.com
Email: CService@caldwellmfgco.com

CSL-00077_r0 Installation Instructions for MIS & SG MAGNUM Hinges 12/15/20