

## MAGNUM<sup>™</sup> Hardware (616 / 617 Snubber Mounting)

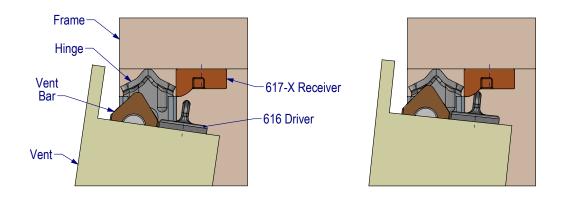

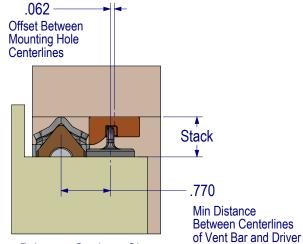

Mount Driver to Sash as Shown.

Mount Receiver to Frame as Shown.

Note the Mounting Centerline Offset Distance.


Adjust Receiver and Secure with Set Location Screw.

## Receiver #617-625 (.625 Stack) #617-688 (.688 Stack) #617-750 (.750 Stack) Injected Molded High Impact Plastic Mount Using (2) #10 Pan Head Screws Set Using (1)

## ADVANTAGE<sup>™</sup> MANUFACTURING A Division of Caldwell Mfg Co Phone: (585) 352-3790 Fax: (585) 352-3792

#8 Pan Head Screw

## Driver #616 Cast Stainless Steel

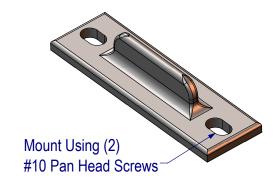

Dimensions Are In Inches Dimensions Are For Reference Purposes Only

web:www.caldwellmfgco.com email:CService@caldwellmfgco.com