




### RECOMMENDED PROFILE DIMENSIONS

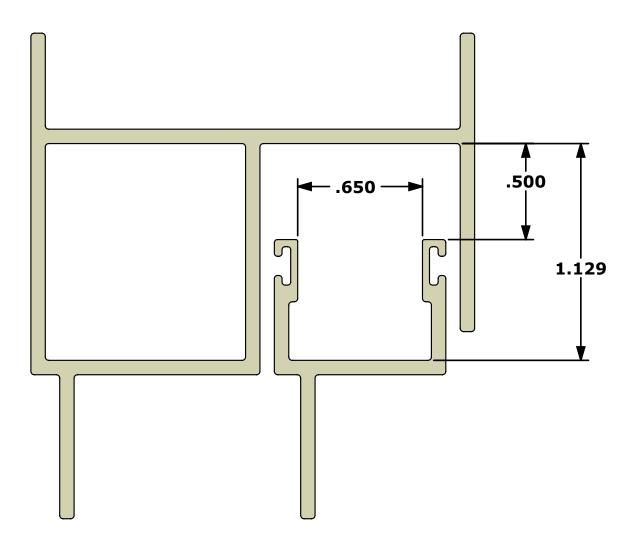

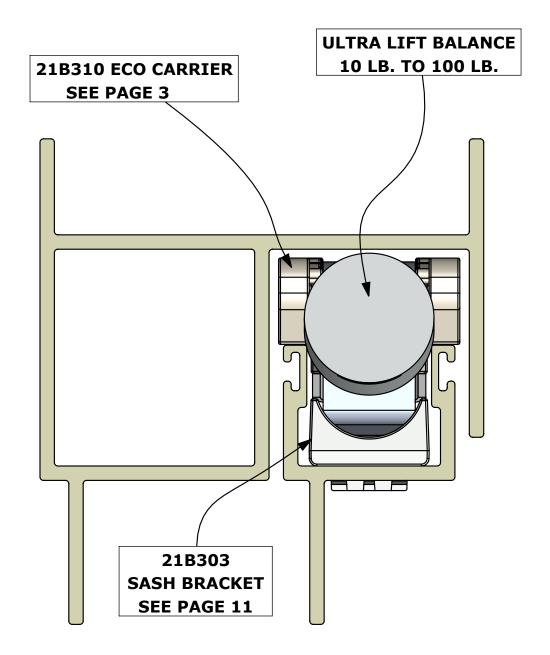



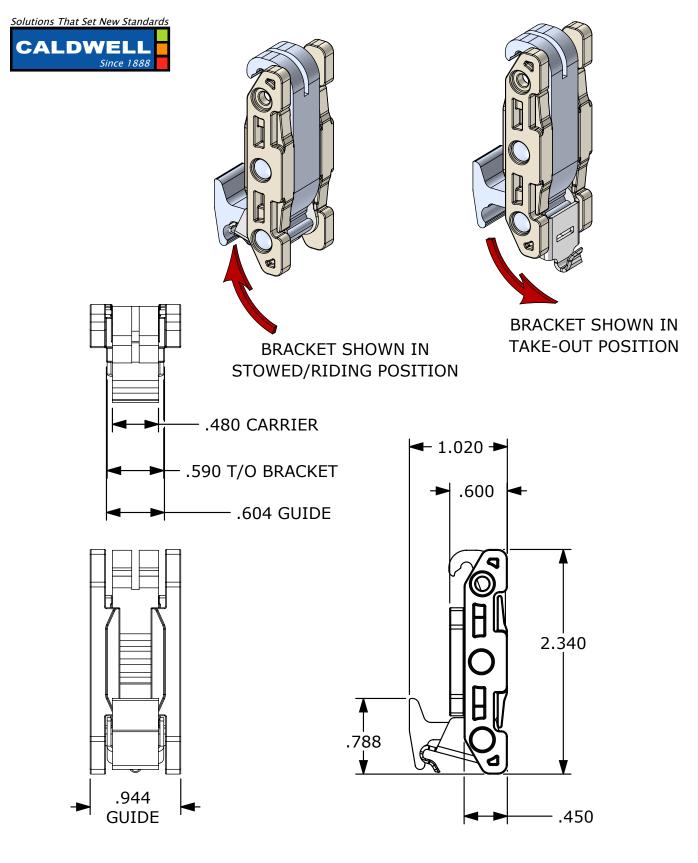


SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

> SL12-019\_r0 Sht. 3 of 11 07/11/15




# FRAME FABRICATION REQUIREMENTS

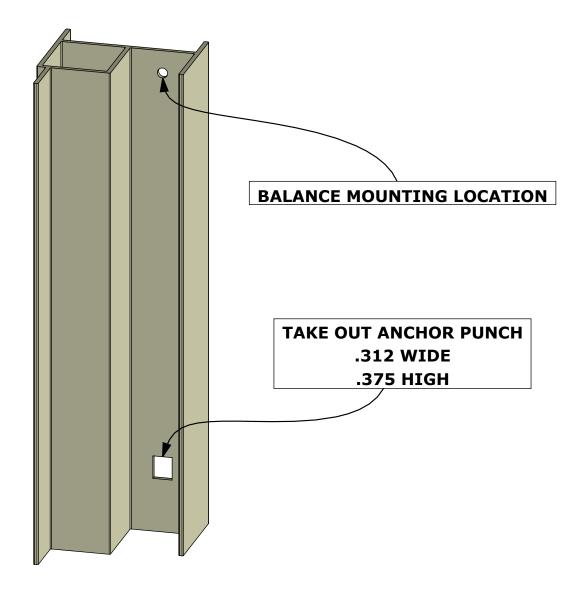




## **BALANCE AND CARRIER INSTALLED**

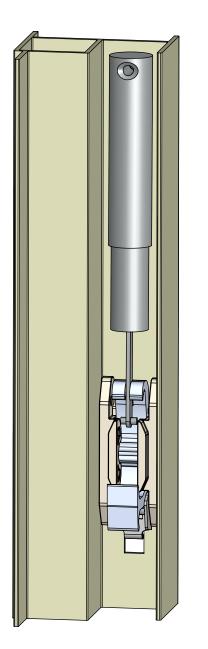





### SASH STILE FABRICATION REQUIREMENTS

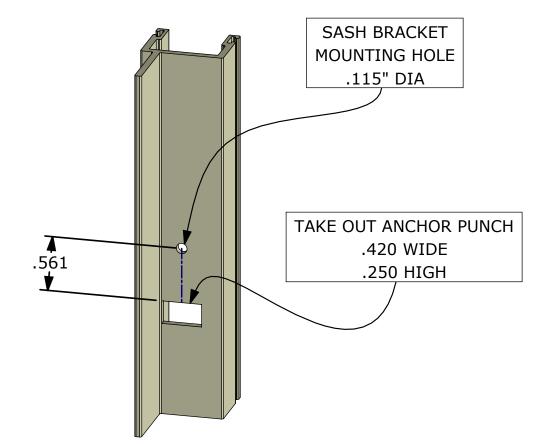


#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

SL12-019\_r0 Sht. 6 of 11 07/11/15



## SASH BRACKET INSTALLATION

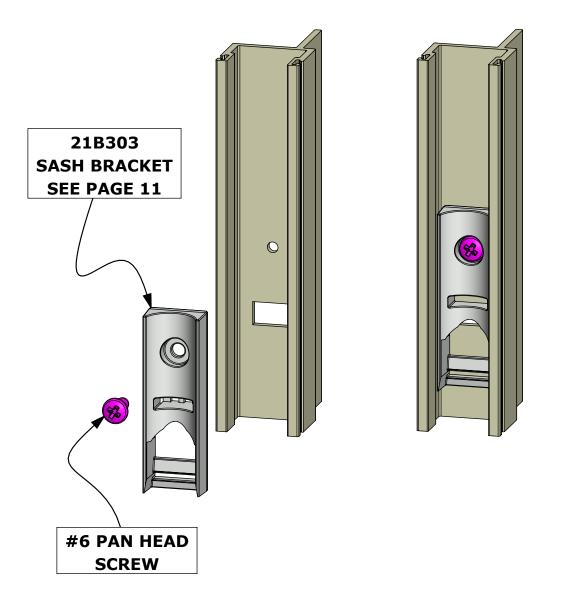


#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS


SL12-019\_r0 Sht. 7 of 11 07/11/15



## SASH LOADED IN FRAME

### SASH SEATED ON CARRIER

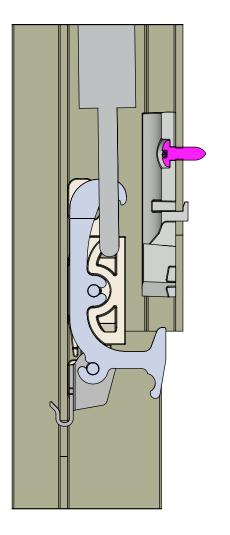

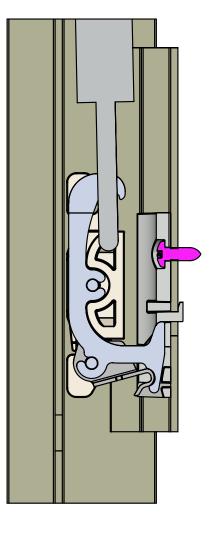


#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

SL12-019\_r0 Sht. 8 of 11 07/11/15



# **REQUIRED SASH TOP GUIDE**

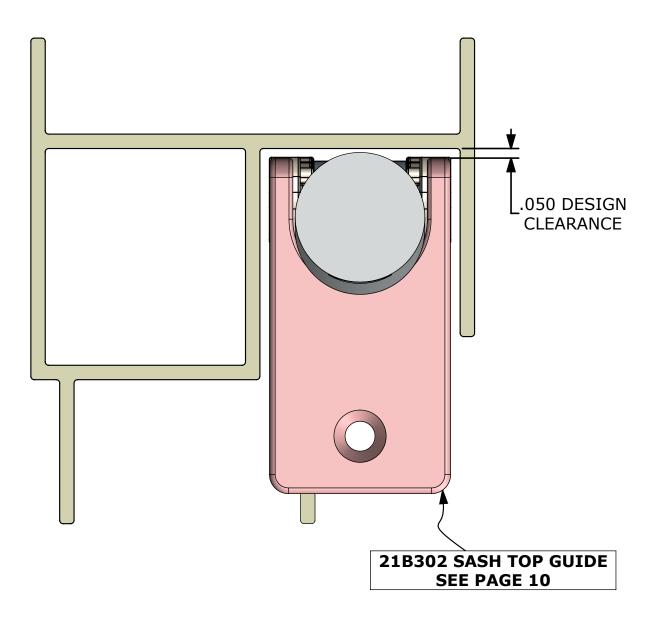


#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

SL12-019\_r0 Sht. 9 of 11 07/11/15



# **21B302 SASH TOP GUIDE**

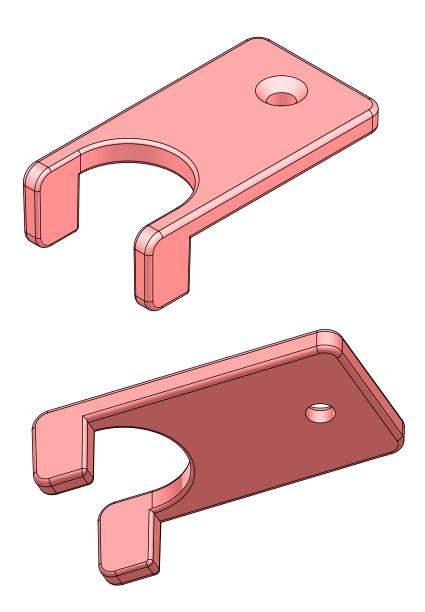


#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

SL12-019\_r0 Sht. 10 of 11 07/11/15



## **21B303 SASH BRACKET**

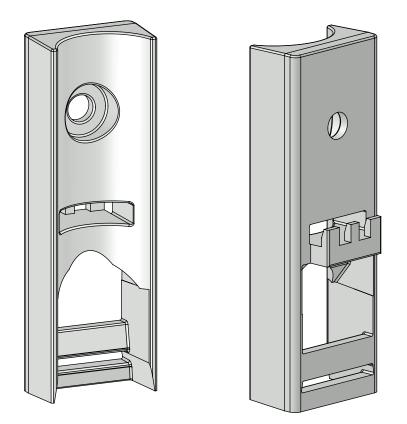

#### SMALL ECO CARRIER (21B310) SYSTEM RECOMMENDATIONS

SL12-019\_r0 Sht. 11 of 11 07/11/15