




ECO-Carrier™ - Sash Installation

21B310 Small Profile Installation/Removal Procedures






Frame with Carrier and Balance Installed

Note: Carrier hook is fully seated in opening. Hook is holding carrier in the sash.

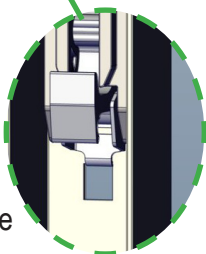

Installation Procedures:

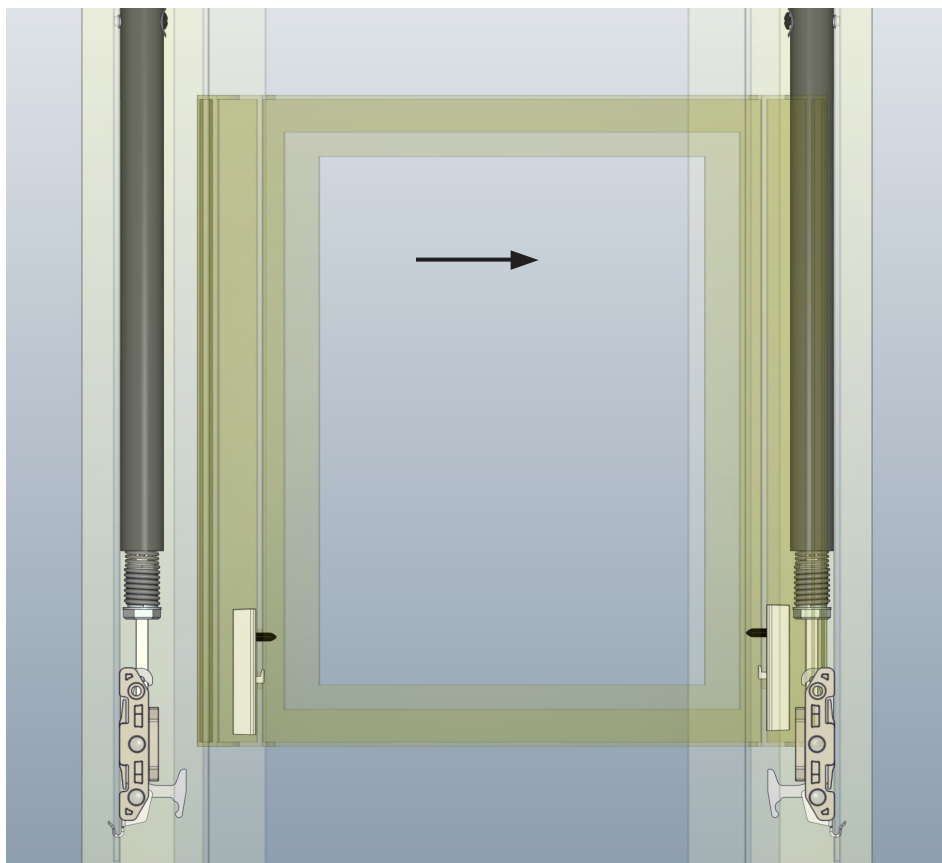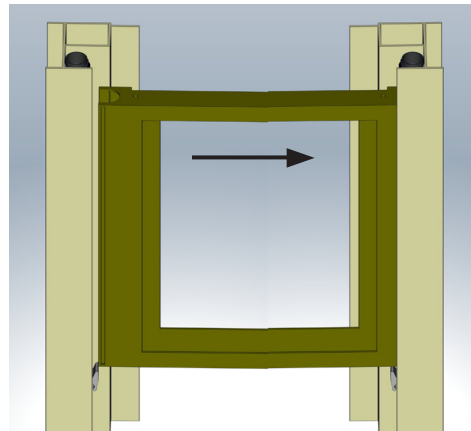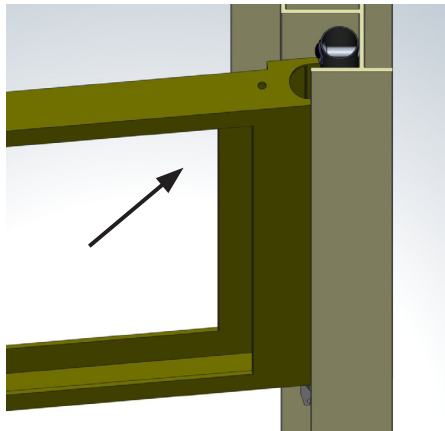

Step 1:

Above carrier place one side of the sash into jamb channel as far as possible, then move other side of sash in line with respective jamb channel.




ECO-Carrier™ - Sash Installation

21B310 Small Profile Installation/Removal Procedures

Step 2:


With sash still above carrier, center the sash within the window opening while supporting the entire weight of the sash.

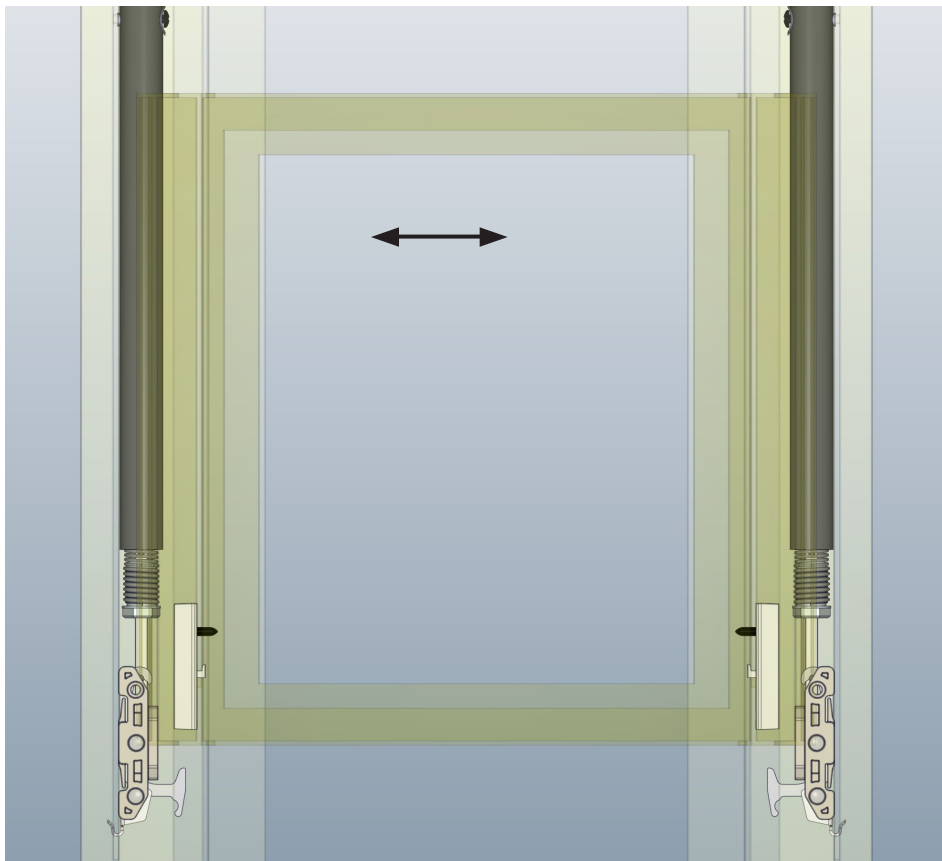

Step 3:

With sash centered in window opening, slowly lower the sash onto the carrier. Be sure that the sash brackets are completely seated on the carrier body.

(Do not drop sash onto carrier)

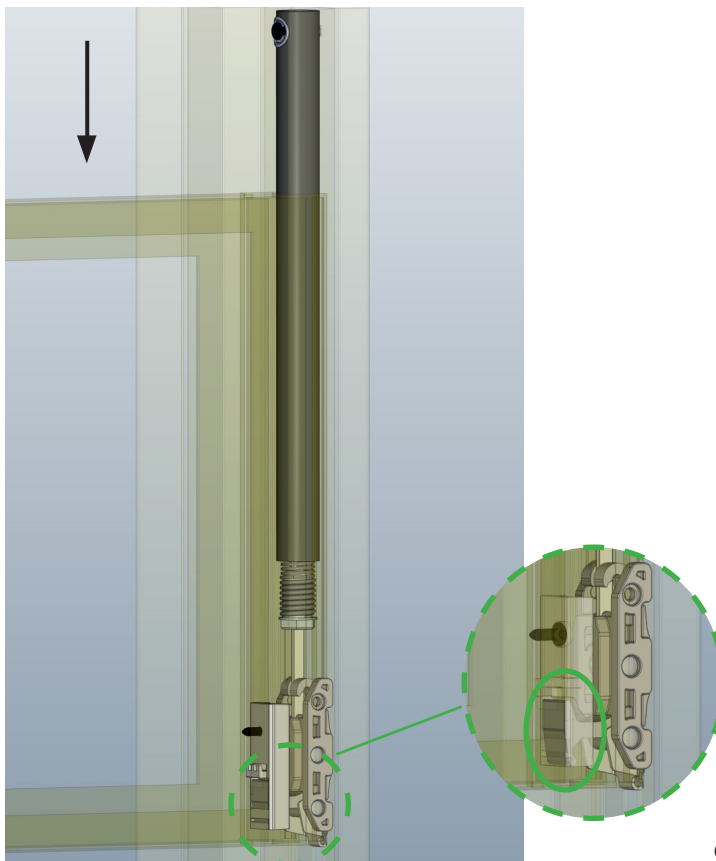





ECO-Carrier™ - Sash Installation

21B310 Small Profile Installation/Removal Procedures


Step 4:

Continue to lower sash so that the carrier hook is clear of the opening in the frame jamb.

Rotate hook into operating position on both sides.

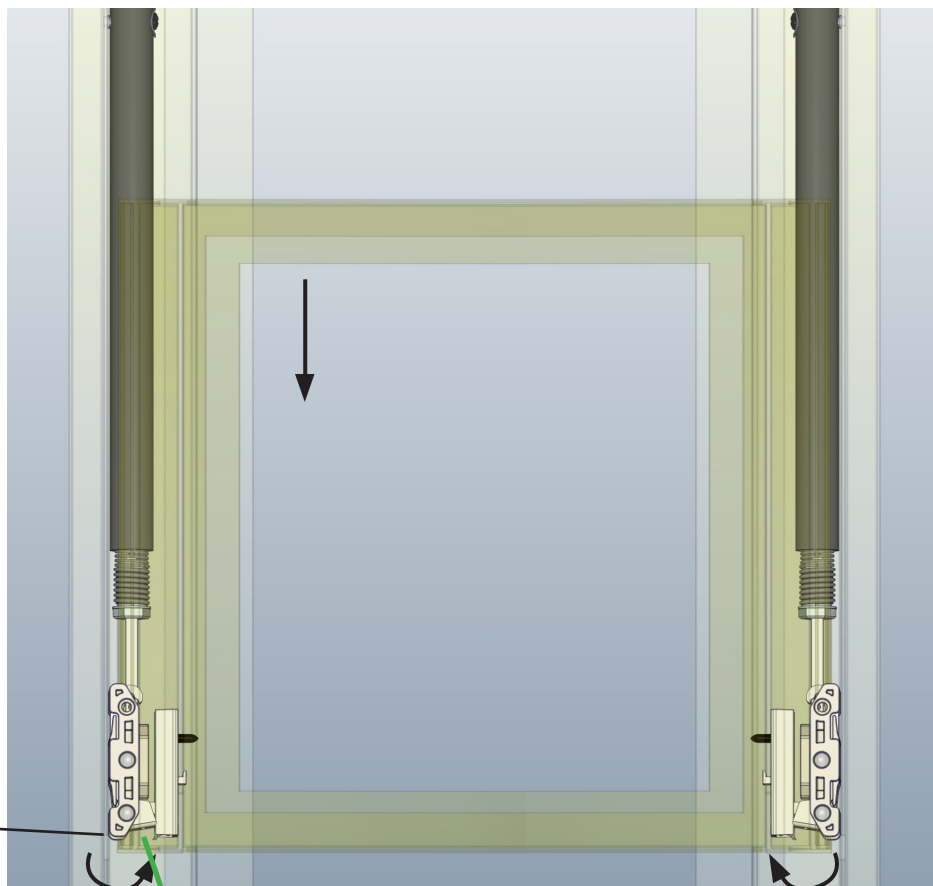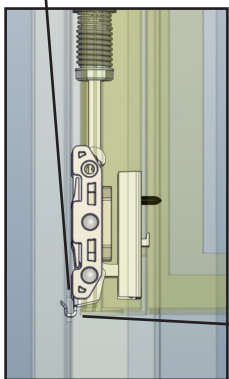

Note: Make sure hook is **snapped** into the fully locked position (See Left)

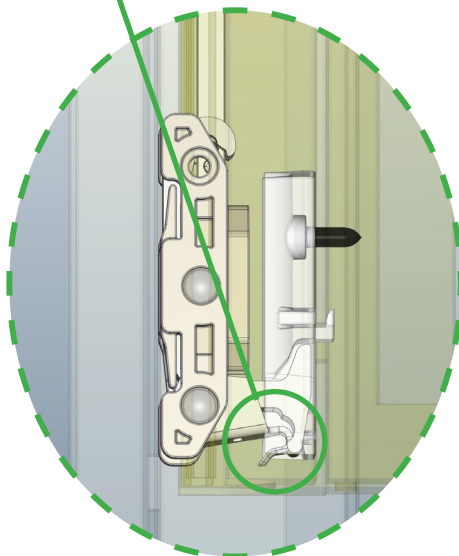

Installation is complete.



ECO-Carrier™ - Sash Installation

21B310 Small Profile Installation/Removal Procedures

Removal Procedures:

Step 1:

Insert a flat blade screwdriver into hook at the bottom of the carrier.

Pry screwdriver downward and toward the frame until the hook snaps free.

Hook should now be hanging against the back of the jamb channel (See Figure A)

Repeat on the other side of the sash.


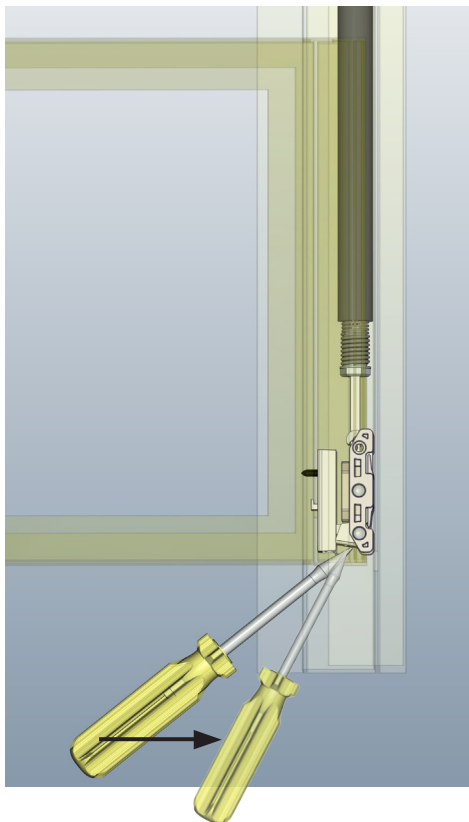




Figure A:

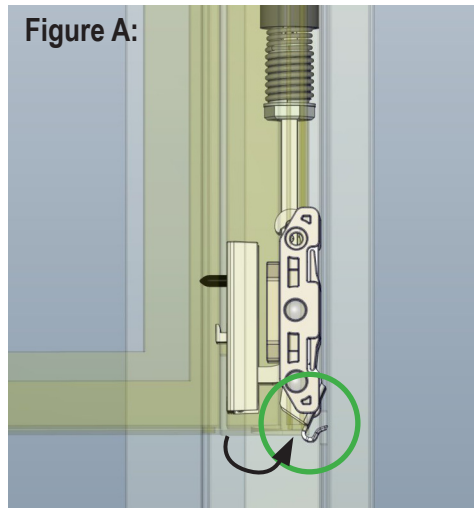

Step 2:

Use your finger or the screw driver to engage the hook of the carrier into the cut out in the jamb. Make sure the hook is fully seated in the opening.

Repeat on the other side of the sash.

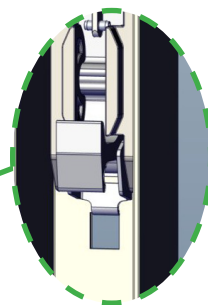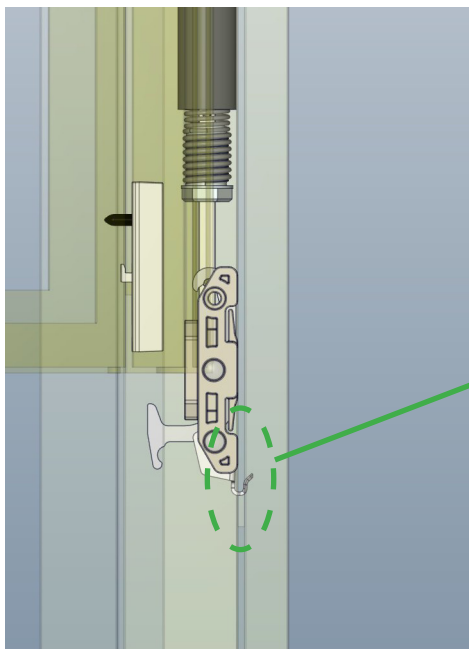




ECO-Carrier™ - Sash Installation



21B310 Small Profile Installation/Removal Procedures

Step 3:
Raise the sash.

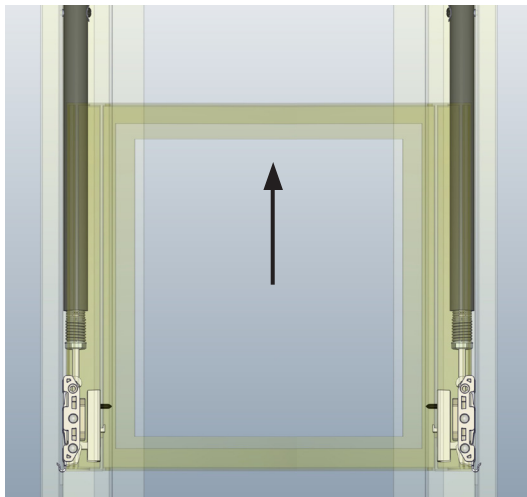

Step 4:
Move the sash as far as possible into one jamb channel, then move the other side of the sash out of the window and toward yourself.

Sash can now be easily lifted out of the frame.

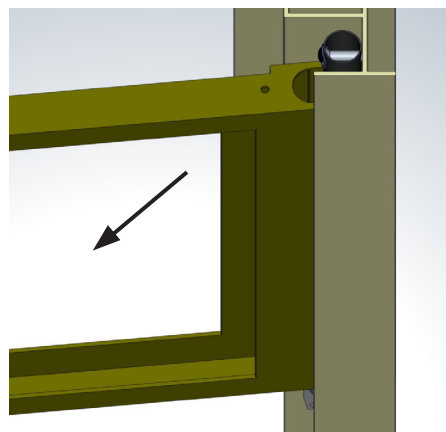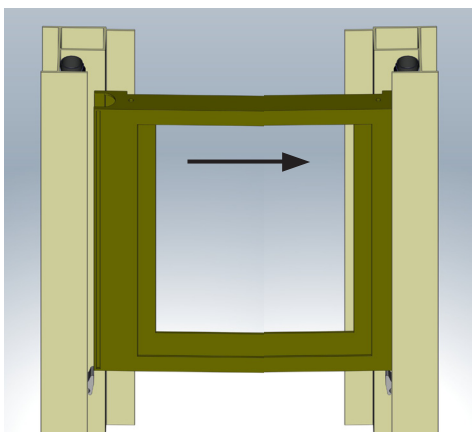

Removal is complete.